

cry baby
CLAPTON®



BASIC OPERATION

POWER

The Eric Clapton Cry Baby® Wah is powered by one 9-volt battery (accessed via underside of pedal), the Dunlop ECB003 9-volt adapter, or an MXR® Brick™ Series power supply.

OPERATION

1. Run a cable from your guitar to the Eric Clapton Cry Baby Wah's INSTRUMENT jack and run another cable from the Eric Clapton Cry Baby Wah's AMPLIFIER jack to your amplifier.
3. Turn on the amplifier and begin playing.
4. To turn the pedal on/off, push the toe of the pedal down until you feel a "click".
5. By rocking your foot back and forth on the pedal, you can change the effect that the Cry Baby Wah has on the tone of your instrument instantaneously.

SPECIFICATIONS

IMPEDANCE

Input	800 k Ω
Output	10 k Ω

FILTER PARAMETER

Low Pass	350 Hz ~ 450 Hz
High Pass	1.5 kHz ~ 2.5 kHz

MAXIMUM LEVEL

Input	- 8.0 dBV
Output	+ 10 dBV

MAXIMUM GAIN

Heel Down	+ 19.5 dB
Toe Down	+ 19 dB

SIGNAL TO NOISE RATIO*

Heel Down	98 dBV
Toe Down	89 dBV

CURRENT DRAW

	900 μ A
--	-------------

*0dBV = 1VRMS, A-weighted